



WATER • TECHNOLOGY



**GB** INSTRUCTIONS MANUAL

CE

**VERTY NOVA 200**  
**VERTY NOVA 400**



**Fig. A**



**Fig. B**

- SAFETY MEASURES -


<b>GB</b>	The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
-----------	--


## 1. SAFETY MEASURES

 **Before starting the pump, read this instruction booklet carefully.**


For safety reasons, the pump must not be used by anyone who has not read these instructions. The pump must not be used by anyone under 16 years of age; keep children well away from the pump when in operation.

The power cord and floating switch must never be used to carry or move the pump. Always use the pump's handle.

 **All contact with water should be avoided while the pump is connected to the electric power supply.**

 **Protect the plug from humidity. The plug must be accessible when the pump is running.**

 **Never remove the plug by pulling on the power cord.**

 **Before taking any action on the pump, always remove the plug from the power socket.**

## 2. USE

VERTY NOVA 200, VERTY NOVA 400: submersible pumps with integrated float switch specifically designed for uses in narrow pits with dimensions down to 20 cm x 20 cm. Suitable to pump clear water containing particles with maximum diameter up to 5 mm.

The temperature of the fluid being pumped must never exceed 35° C

 **The pump must not be used to pump salt water, sewage (ACI models), flammable, corrosive or explosive liquids (e.g. petroleum oil, petrol, thinners), grease, oils or foodstuffs.**

 **If the power supply cord has been damaged, it must be replaced by the manufacturer or his authorized customer support service in order to avoid all risks.**

 **Before starting the pump, make sure that:**

- the voltage and frequency specified on the pump's nameplate coincide with those of the available power supply;
- there are no signs of damage to the pump or its power cord;
- the electric connection is made in a dry place, protected against any risk of flooding;
- for safety reasons, make sure that the pump is powered via a differential switch the nominal operating differential current of which does not exceed 30mA and that there is an effective grounding system.
- the length of the power cord is no more than 10 meters. Any extension cords must comply with the requirements of the DIN VDE standard 0620.

**Note:** given the different provisions applicable to the safety of electric systems in different countries, make sure that the pump system, as concerns its intended use, is in accordance with current legislation.

### 3. STARTING THE PUMP

Insert the plug on the power cord in a suitable power socket.

#### VERTY NOVA 200 – VERTY NOVA 400

Automatic operation (A):

The integrated float switch starts and stops the pump automatically when the indicator (2) is positioned on “A” (Fig. A).

Manual operation (M):

To start the pump, lift the knob (3) positioning the indicator (2) on “M” (Fig. A). In these conditions the suction level of the pump will be down to 2-3 mm.

In order to check the correct working and clean the float switch open the cover (1) positioning the indicator on “O” (Fig. A-B).

### 4. RECOMMENDATIONS

To ensure the proper operation of the pump, it is important to comply with the following recommendations:

- **The pump must never be allowed to run dry.**
- Never leave the pump in operation when the delivery pipe is clogged
- The pump must only be used when it is immersed in water. If the water runs out, the pump must be stopped immediately by removing the plug from the power supply.
- Pay careful attention when the pump is operated in manual mode.
- The pump must be placed in a stable position inside a collection pit or in the lowest part of the place where it is installed.
- The recommended dimensions for the pit are:
  - 20 cm x 20 cm for models VERTY NOVA 200-VERTY NOVA 400.
- It is absolutely essential to prevent any risk of the pump freezing. In the event of freezing temperatures, remove the pump from the liquid, empty it and keep it in a place where it cannot freeze.
- To avoid the obstruction of the suction side, periodically, it is advisable to make sure that no dirt (leaves, sand, etc.) has been accumulated in the collection pit.

#### Overload protection

The pump has a thermal overload safety device. In the event of any overheating of the motor, this device automatically switches off the pump. The cooling time is roughly 15 to 20 minutes, then the pump automatically comes on again. If the overload cutout is tripped, it is essential to identify and deal with the cause of the overheating. See Troubleshooting.

### 5. TROUBLESHOOTING



**Before taking any troubleshooting action, disconnect the pump from the power supply (i.e. remove the plug from the socket).**

**If there is any damage to the power cord or pump, any necessary repairs or replacements must be handled by the manufacturer or his authorized customer support service, or by an equally qualified party, in order to prevent all risks.**

<b>Fault</b>	<b>Possible causes</b>	<b>Solutions</b>
The motor does not start or makes no noise.	A) Make sure the motor is powered. B) The pump is not enabled by the float.	B) - Make sure the float can move freely. - Increase the depth of the pit.
The pump delivers no water.	A) The suction grid or piping are clogged. B) The impeller is worn or stuck. C) The required head is too high for the characteristics of the pump. D) Water level under the suction minimum.	A) Remove the obstruction. B) Replace the impeller or remove the obstruction.
The pump does not stop.	A) The pump is not disabled by the float.	A) Make sure the float can move freely.
The flow rate is too low.	A) Make sure the suction grid is not partially clogged. B) Make sure the impeller or delivery pipe are not partially clogged or fouled.	A) Remove any obstructions. B) Remove any obstructions.
The pump stops running (possible intervention of the thermal overload switch).	- Make sure the fluid being pumped is not too dense, causing the motor to overheat. - Make sure the temperature of the water is not too high. - Make sure there is no solid body obstructing the impeller. - Power supply doesn't comply with the nameplate's data.	Disconnect the power cord, correct the reason for overheating; then wait until the pump is cooled, plug the cord and resume operation.

## **GUARANTEE**

Any material or manufacturing defects will be corrected during the guarantee period (24 months). It is up to the manufacturer to decide whether to repair or replace any faulty parts.

The manufacturer's guarantee covers all substantial defects attributable to manufacturing or material defects, providing the product has been used correctly and in compliance with the instructions.

The guarantee becomes null and void in the event of the following:

unauthorized attempts to repair the appliance,

- unauthorized attempts to repair the appliance
- unauthorized technical changes to the appliance,
- use of non-original spare parts,
- manhandling,
- inappropriate use, e.g. for industrial purposes.

The guarantee does not cover:

- parts liable to rapid wear and tear.

The guarantee is valid if the purchase date is stated by the invoice, delivery bill or purchase receipt, or by the reseller's stamp, which is to be placed on this certificate. Send the certificate in accordance with the instructions.





**DAB PUMPS LTD.**

Units 4 and 5, Stortford Hall Industrial Park,  
Dunmow Road, Bishops Stortford, Herts  
CM23 5GZ - UK  
salesuk@dwtgroup.com  
Tel.: +44 1279 652 776  
Fax: +44 1279 657 727

**DAB PUMPS B.V.**

Brusselstraat 150  
B-1702 Groot-Bijgaarden - Belgium  
info.belgium@dwtgroup.com  
Tel.: +32 2 4668353  
Fax: +32 2 4669218

**DAB PUMPS INC.**

3226 Benchmark Drive  
Ladson, SC 29456 USA  
info.usa@dwtgroup.com  
Ph. : 1-843-824-6332  
Toll Free : 1-866-896-4DAB (4322)  
Fax : 1-843-797-3366

**000 DAB PUMPS**

Novgorodskaya str, 1, bld G, office 308  
127247 Moscow - Russia  
info.russia@dwtgroup.com  
Tel.: +7 495 122 00 35  
Fax: +7 495 122 00 36

**DAB PUMPS POLAND SP. z.o.o.**

Mokotow Marynarska  
ul. Postępu 15C  
02-676 Warszawa - Poland  
Tel. +48 223 81 6085

**DAB PUMPS CHINA**

No.40 Kaituo Road, Qingdao Economic &  
Technological Development Zone  
Qingdao City, Shandong Province, China  
PC: 266500  
info.china@dwtgroup.com  
Tel.: +8653286812030-6270  
Fax: +8653286812210

**DAB PUMPS IBERICA S.L.**

Avenida de Castilla nr.1 Local 14  
28830 - San Fernando De Henares - Madrid  
Spain  
info.spain@dwtgroup.com  
Ph.: +34 91 6569545  
Fax: +34 91 6569676

**DAB PUMPS B.V.**

Albert Einsteinweg, 4  
5151 DL Drunen - Nederland  
info.netherlands@dwtgroup.com  
Tel.: +31 416 387280  
Fax: +31 416 387299

**DWT South Africa**

Podium at Menlyn, 3rd Floor, Unit 3001b,  
43 Ingersol Road, C/O Lois and Atterbury,  
Menlyn, Pretoria, 0181 South-Africa  
info.sa@dwtgroup.com  
Tel +27 12 361 3997  
Fax +27 12 361 3137

**DAB PUMPEN DEUTSCHLAND GmbH**

Tackweg 11  
D - 47918 Tönisvorst - Germany  
info.germany@dwtgroup.com  
Tel.: +49 2151 82136-0  
Fax: +49 2151 82136-36

**DAB UKRAINE Representative Office**

Regus Horizon Park  
4M. Hrinchenka St, suit 147  
03680 Kiev. UKRAINE  
Tel. +38 044 391 59 43

**DAB PRODUCTION HUNGARY KFT.**

H-8800  
Nagykanizsa, Buda Ernő u.5  
Hungary  
Tel. +36.93501700

**DAB PUMPS DE MÉXICO, S.A. DE C.V.**

Av Gral Álvaro Obregón 270, oficina 355  
Hipódromo, Cuauhtémoc 06100  
México, D.F.  
Tel. +52 55 6719 0493

**DAB PUMPS S.p.A.**

Via M. Polo, 14 - 35035 Mestrino (PD) - Italy  
Tel. +39 049 5125000 - Fax +39 049 5125950  
www.dabpumps.com