

THINPOTS INSTALLATION GUIDE

This Thinpot Vertical Garden System has been specifically designed to suit the 1333L, 2000L, 2000L Fat and the 4000L Thintanks

1

The Thinpots are hung of the face of the tank by removing the existing wall plugs in the tank and insert the Thinpot adaptor plugs by using a rubber mallet.

2

The hooks on the plugs need to be parallel to the horizontal channels in the tank

3

Then clip 13mm black poly pipe onto the adaptor plugs. The poly pipe should be cut off 20mm past the last adapter hook each end. If there is only 1 row of pots then a stop end should be fitted with a ratchet clamp. If there are multiple rows then a barbed elbow or a barbed tee fitting should be fitted into the poly pipe

4

All connections should be fitted with a ratchet clamp using multi-grip pliers for either a self-watering system or manual watering.

5

The Thinpots are designed to be joined in groups of two between the adapter plugs. There is a male/female channel on the end of every Thinpot. Simply join the pots by sliding the male channel into the female channel..

6

Now the Thinpots can be hung on the poly pipe

7

If you are using an irrigation system then now is the time to punch holes in the poly pipe centrally located in the cut out in the rear of the Thinpots.

8

With the holes punched in the poly pipe, hold the pipe firmly in one hand and push the barbed end of a emitter into the hole (often makes a click once inserted)

9

The Thinpots can now be filled. They must be filled of at least 1/3 with coconut fibre or a similar product and then the rest potting mix (this will stop the potting mix falling out, allow for a free flow of surplus water and also to limit the weight in the pots) once filled insert chosen plants

10

Now its time to enjoy your Vertical Garden. If you are using an irrigation system then a pressure reducer must be used unless using a low energy consuming pump



ThinPots Connector



Ratchet clamp



13mm Poly Pipe



Barbe Poly Tee



Barbe Poly Elbow



Punch



Stop End



Emitter




Pressure Reducer




Multi Grip



Coconut Fibre

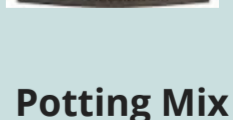

Potting Mix

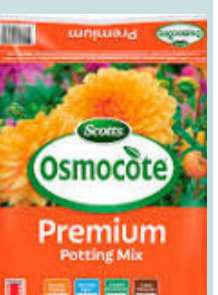

Premium Potting Mix



POINTS TO NOTE

- ALL CONNECTIONS MUST HAVE A RATCHET CLAMP
- THINPOTS MUST BE JOINED IN GROUPS OF 2
- THINPOTS MUST BE FILLED A MINIMUM 1/3 OF COCONUT FIBRE (SIMILAR PRODUCT)
- IF USING A IRRIGATION SYSTEM THEN A PRESSURE REDUCER MUST BE USED

Note:
We supply Thinpots and connectors only.
All others accessories can be purchased from hardware or irrigation supplies.